


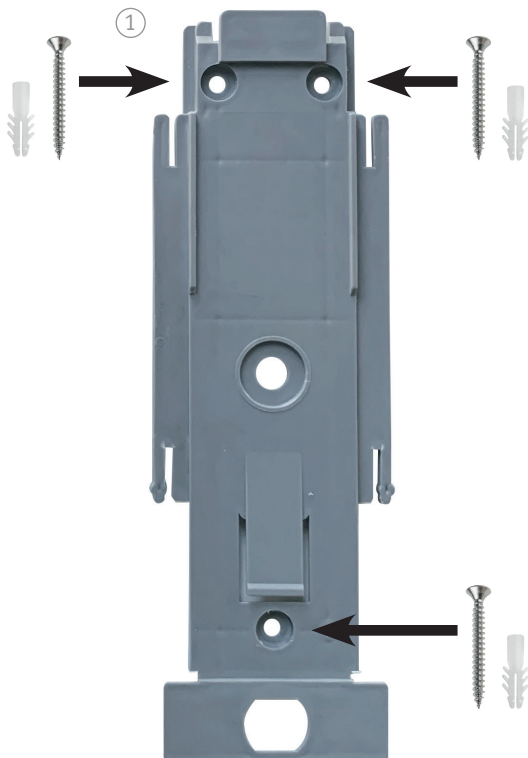

1. Using the backing bracket, make holes for the three screws. Use the drywall anchors if screws will not be in a stud. Make sure that the backing bracket will be level on the wall. Attach the bracket to the wall using the three screws.
2. Slide the Hand Sanitizer Station over the tracks in the backing bracket until the station clicks into place.
3. Pull the bottom of the bottle forward and then tilt it forward to remove it from the station. Fill the bottle with hand sanitizer or liquid soap. Replace the bottle in the hand sanitizer station.