



Scope of delivery:


Mounting kit
Assembly instructions
Allen key SW 3 (mounting frame to upright)
Allen key SW 4 (mounting of frame parts)

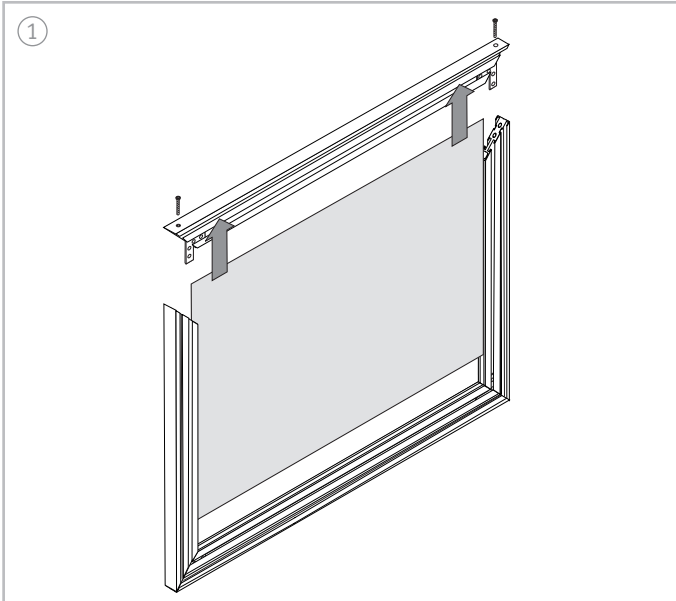


1. Loosen/remove the upper frame section.

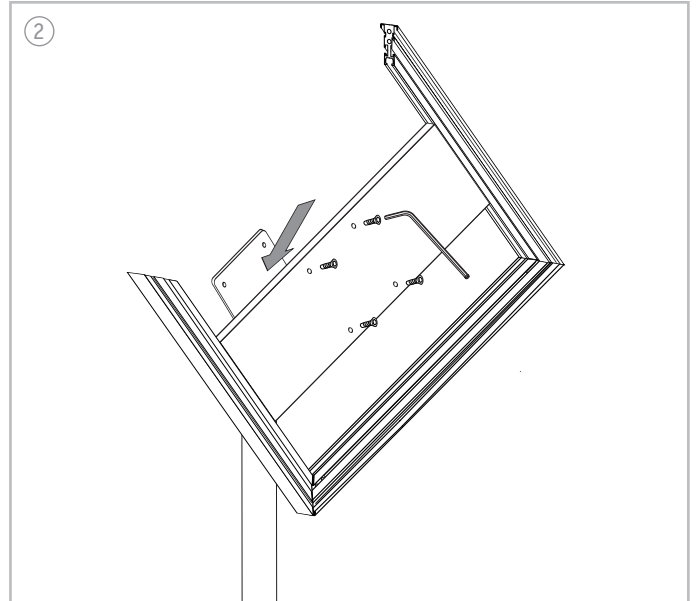

2. Attach the frame to upright with 4 screws.

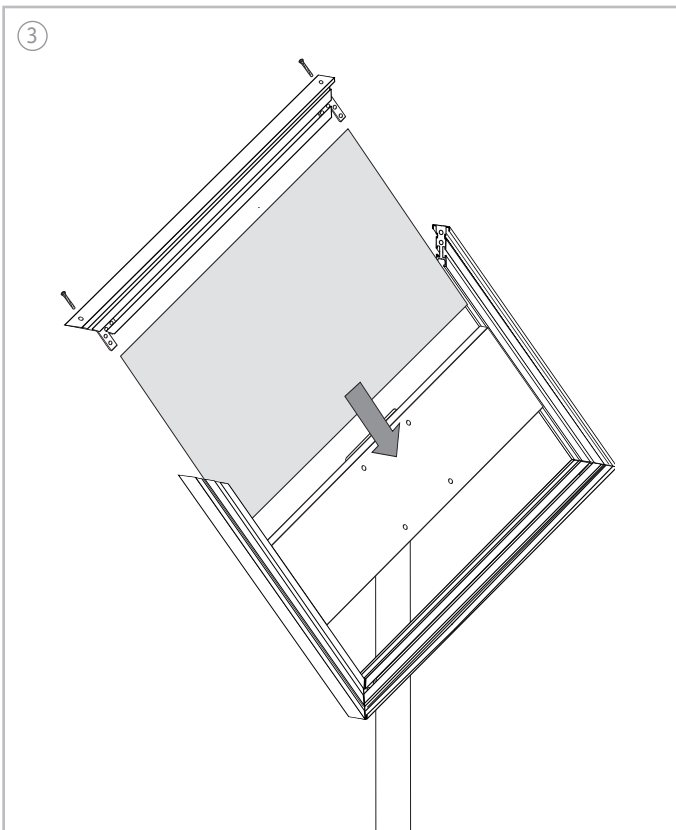

3. Insert the printed panel and mount the frame.

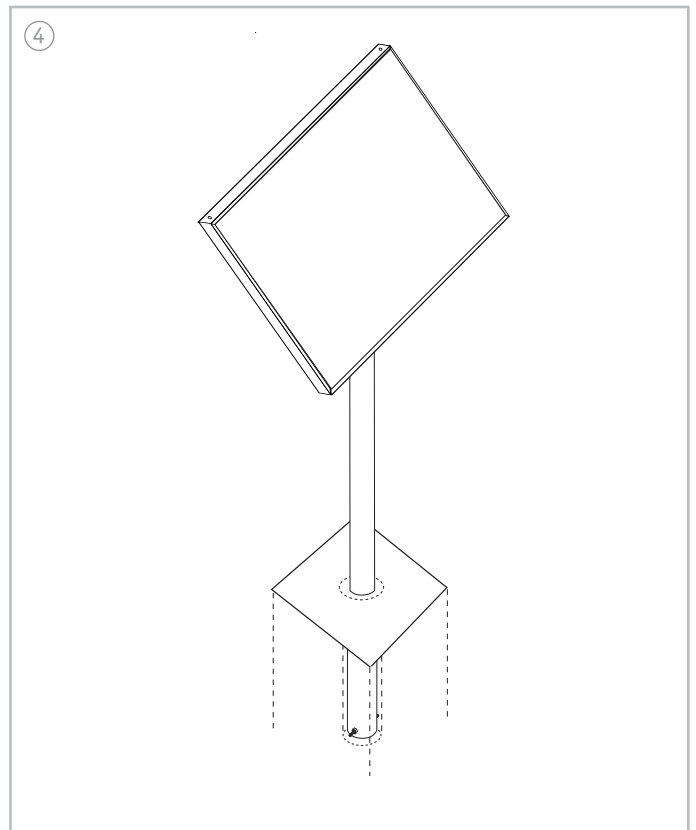

4. Screw the anti-rotation lock into the base and place the sign in the sleeve foundation, align and fill with concrete.