



Scope of delivery:


Mounting kit
 Assembly instructions
 Allen key SW 3 (mounting frame to upright)
 Allen key SW 4 (mounting of frame parts)

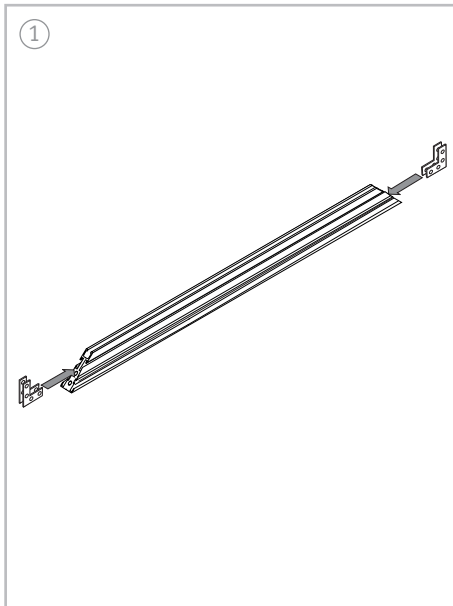


1. Slide corner bracket into frame profiles
Attention: use frame profile without hole

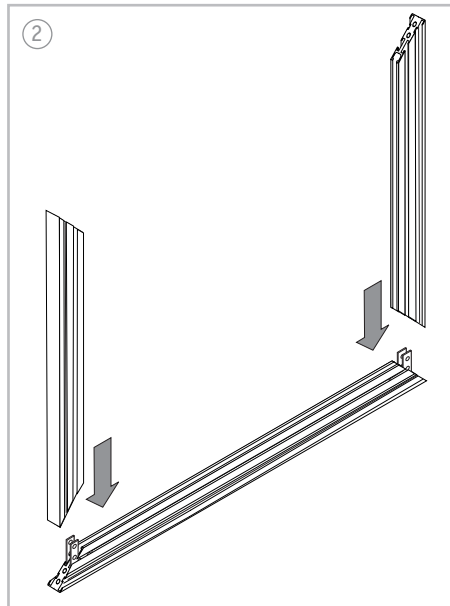


2. Slide the side frame profiles onto the lower frame profile / into the corner brackets.
Attention: Threaded hole points upwards
 Align the frame parts so that a suitable mitre is created and tighten the screws in the corner brackets (Allen key SW4).

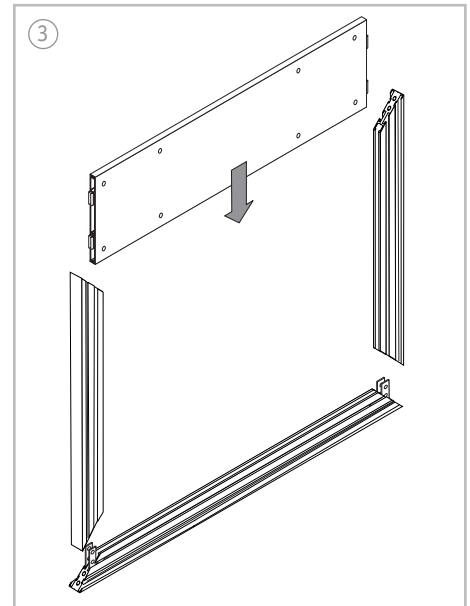


3. Loosen the grub screws (Allen key SW3) in the clamps of the text panel but do not unscrew them. Then slide the panel into the frame (larger through-holes to the front/top and grub screws of the clamps to the bottom/rear).

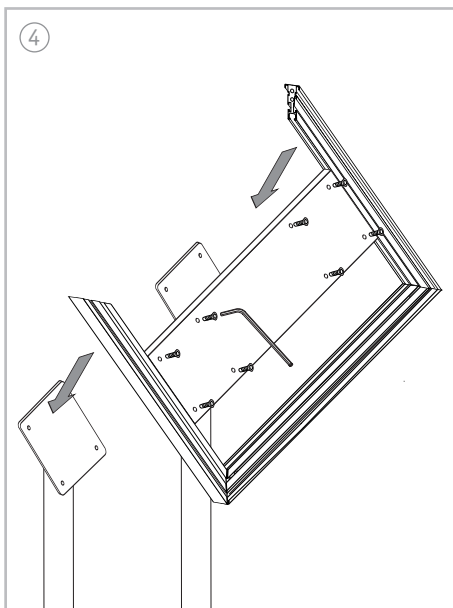

4. Attach frame and fasten with 8 screws.

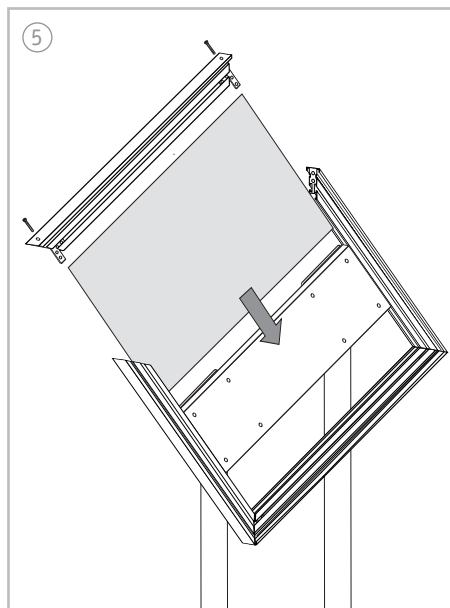

5. Slide in the panel, insert the corner brackets into the upper profile and slide this into the frame. Fasten the frame with two screws from above.

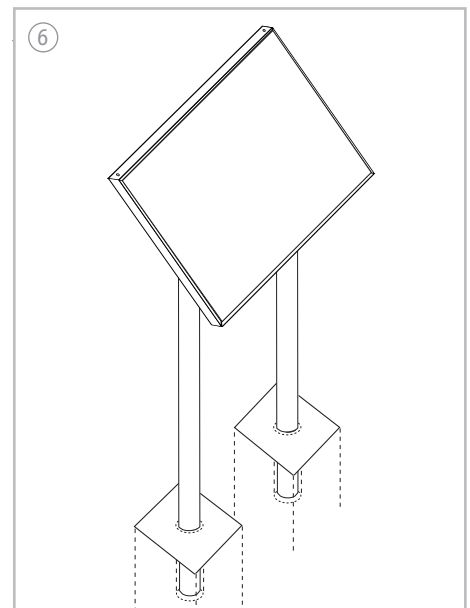

6. Place the sign display in the sleeve foundations and backfill the foundations with concrete accordingly.